



USER GUIDE

## LIFTING BEAM

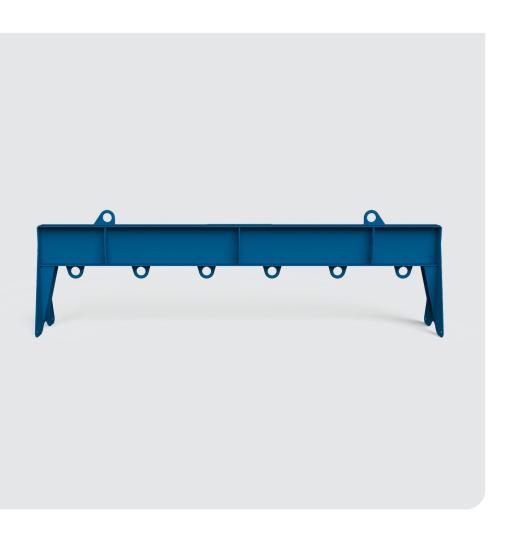

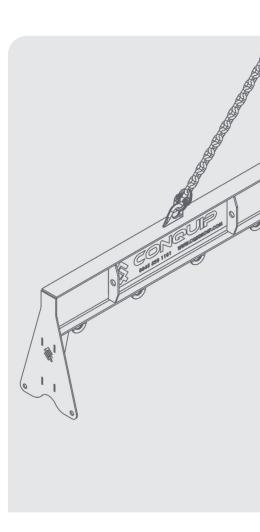

## **DISCLAIMER**

Do not attempt to handle or operate this equipment before you have received sufficient training. Before use, operatives must have carried out all checks featured on the Visual Inspection Sheet on page 11. It is imperative that you have read the General Safety Instructions on page 12 and sufficiently familiarised yourself with the Operational Procedures in this document.

Note that this item is compliant only to the standards specified in this User Guide and it is therefore the duty of the responsible person(s) to review and ensure compliance.

## **CONTENTS**

### PRODUCT INFORMATION

|     | INTRODUCTION                         | 04 |
|-----|--------------------------------------|----|
|     | SPECIFICATION                        | 05 |
| OPE | ERATIONAL PROCEDURES                 |    |
|     | IMPORTANT USAGE NOTES                | 09 |
|     | USING WITH LIFTING APPRARATUS        | 09 |
| MΑ  | INTENANCE & INSPECTION               |    |
|     | MAINTENANCE REGIME                   | 10 |
|     | VISUAL INSPECTION SHEET              | 11 |
| GEN | NERAL SAFETY INSTRUCTIONS            |    |
|     | SAFETY INSTRUCTIONS                  | 12 |
|     | GENERAL NOTES                        | 13 |
| .EG | AL                                   |    |
|     | TERMS AND CONDITIONS                 | 14 |
|     | EC DECLARATION OF CONFORMITY         | 18 |
|     | STANDARDS AND REGULATIONS APPLICABLE | 19 |

## **INTRODUCTION**

### OVERVIEW

The Conquip Lifting Beam has been designed to aid in lifting large and often heavy loads.

The Lifting Beam distrubutes the load across multiple points to increase stability and to remove inward or crushing forces. A built-in stand prevents the hooks being fouled when the beam is landed on the ground and enables easier access to the lifting chains and materials.

The beam has two attachment points on the top side for connecting to a crane or other lifting apparatus. On the underside there are multiple points to attach the load to, allowing a greater variety of items that can be manoeuvred around site and ensuring a safer, more stable lift.

### **KEY BENEFITS**

- Designed with a built-in stand that prevents fouling of the hooks and easy access to the lifting chains and materials.
- Available in 3, 5 and 7-metre lengths as standard.
- Bespoke lengths can be made to order.
- Tested and certified to a Factor of Safety 3.
- Multiple lifting eyes enable the beam to lift a large variety of items while providing a safer, more stable lift.
- Ideal for large, heavy or awkward loads.

### **SPECIFICATION**

THE RANGE



| CODE        | TYPE    | WEIGHT<br>(kg) | WLL* (kg) | LIFTING POINTS |
|-------------|---------|----------------|-----------|----------------|
| CA233-05000 | 3-metre | 170            | 5000      | 6              |
| CA235-05000 | 5-metre | 260            | 5000      | 10             |
| CA237-05000 | 7-metre | 350            | 5000      | 12             |

\*Working Load Limit


**©CONQUIP** 

PRODUCT INFORMATION




## **SPECIFICATION**

| ITEM                 | PRODUCT CODE |
|----------------------|--------------|
| 3-metre Lifting Beam | CA233-05000  |
| 5-metre Lifting Beam | CA235-05000  |
| 7-metre Lifting Beam | CA237-05000  |

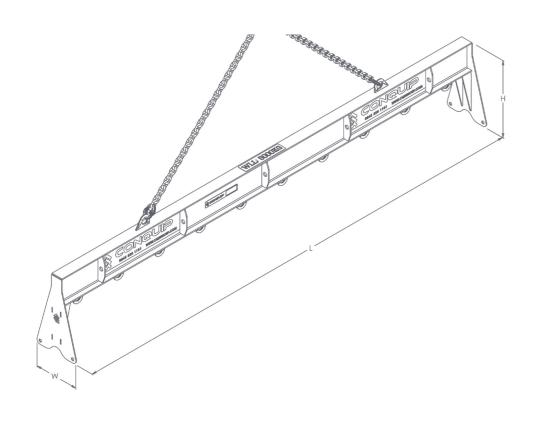

| LENGTH<br>(mm) | WIDTH<br>(mm) | HEIGHT<br>(mm) |
|----------------|---------------|----------------|
| 3000           | 473           | 817            |
| 5000           | 473           | 817            |
| 7000           | 473           | 817            |

## **SPECIFICATION**

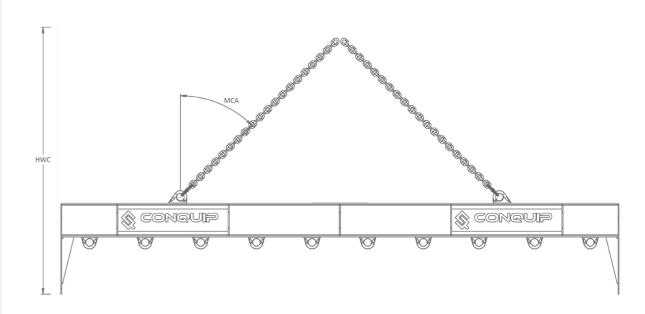

| CODE        | HEIGHT WITH CHAINS (mm) | MAXIMUM CHAIN ANGLE (degrees) |
|-------------|-------------------------|-------------------------------|
| CA233-05000 | 1900mm                  | 45                            |
| CA235-05000 | 2400mm                  | 45                            |
| CA237-05000 | 3000mm                  | 45                            |

**\$**CONQUIP®







## **SPECIFICATION**

### LIFTING POINTS & SLINGING RANGE


### 3-METRE LIFTING BEAM

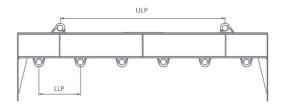

### 5-METRE LIFTING BEAM

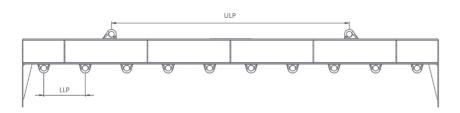

### 7-METRE LIFTING BEAM

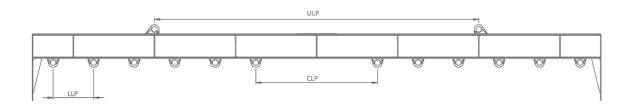

| CODE        | UPPER LIFTING POINTS (mm) | POINTS POINTS LIFTING POINTS | RAI  | GING<br>NGE |      |
|-------------|---------------------------|------------------------------|------|-------------|------|
|             | (111111)                  | (mm)                         | (mm) | MIN         | MAX  |
| CA233-05000 | 1986                      | 500                          | N/A  | 500         | 2500 |
| CA235-05000 | 2866                      | 500                          | N/A  | 500         | 4500 |
| CA237-05000 | 4000                      | 500                          | 1500 | 1500        | 6500 |

### **OPERATIONAL PROCEDURES**

### IMPORTANT USAGE NOTES

- Ensure that all materials have the relevant capacity lifting chains attached before moving the lifting beam.
- Use tag lines to control long loads.
- Ensure the lifting beam is kept at a sensible height and is guided by a slinger/signaller at all times to avoid personnel injury.
- Ensure that the attachment points on the underside of the Lifting Beam are used correctly so that the beam is balanced when it is lifted high enough to be load bearing.
- Ensure that the materials or goods are being relocated to a place of stable, firm ground that can take the load of the materials and the Lifting Beam.
- Refer to the requirements of BS 7121: Part 1 when using beams with cranes in tandem.

### USING WITH LIFTING APPARATUS

- 01. Using the attachment points on the top of the Lifting Beam, attach the relevant lifting chain.
- 02. Lift the Lifting Beam using the crane or suitable lifting apparatus. Move it to where the materials or goods are located.
- 03. Attach the materials or goods to the Lifting Beam using relevant lifting chains and safety accessories.
- 04. Using the crane or lifting apparatus, transport the Lifting Beam and materials to the relevant place on site and place onto the ground.
- 05. Disconnect the lifting chains that are attached to the materials and goods and lift the Lifting Beam into place for the next lift.

## **MAINTENANCE & INSPECTION**

### MAINTENANCE REGIME

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure compliance with relevant regulations. Conquip recommend carrying out a thorough examination every six months.
- This equipment may incorporate various loose and detachable items including, but not limited to pins, bolt assemblies and adaption plates. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as determined by your risk assessment or working practice. If you have any concerns about the machinery's condition or suitability, do not use it.

### VISUAL INSPECTION CHECKLIST

| INSPECTION<br>ITEMS                       | RESULTS      |                | COMMENTS         |  |
|---|--------------|----------------|------------------|--|
|   | SATISFACTORY | UNSATISFACTORY |                  |  |
| Serial Number                             |              |                | CQ               |  |
| Product Code                              |              |                |                  |  |
| Working Load<br>Limit (Kg)                |              |                |                  |  |
| Conforms to user guide specification      |              |                |                  |  |
| Lifting eyes worn or elongated            |              |                |                  |  |
| General visual<br>framework<br>inspection |              |                |                  |  |
| SIGNATURE                                 |              |                |                  |  |
| Name                                      | Position     | Qualification  | Signature & Date |  |
|   |              |                |                  |  |

**©CONQUIP** 

### GENERAL SAFETY INSTRUCTIONS

# **GENERAL SAFETY INSTRUCTIONS**

The equipment should be properly operated and maintained to keep it in a safe, efficient operating condition. Be sure that all fixings and components are free of mud or other matter that might cause issues hazardous to the operator, service personnel or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This operations manual describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide, however, for abnormal conditions or situations. Service personnel and operators must be safety conscious and alert to recognise potential servicing or operating safety hazards at all times, and take necessary precautions to assure safe servicing and operation of the equipment.



M002
Refer to instructions



M010
Wear protective clothing



M004 Wear eye protection

Wear head protection



M008 Wear safety footwear



**©CONQUIP** 

M009
Wear protective gloves



M015 Wear high-visibility clothing

### **GENERAL NOTES**

- Read this operations manual and learn the operating characteristics and limitations of the equipment. Know what operating clearances the machine requires.
- Read and understand all the safety signs prior to operation.
- If the safety signs are obstructed by dirt or debris, clean them using mild soap and water prior to operation.
- If the safety signs are damaged or illegible, replace them immediately, prior to operation.
- Be aware of operating hazards that weather changes can create on the job. Know proper procedures to follow when a severe rain or electrical storm strikes.
- Never attempt to operate or work on machinery when not feeling physically fit.
- Never wear loose clothing, rings, watches, heavy gloves etc., that might catch and result in injury.
- Know what safety equipment (PPE) is required and use it. Such equipment may be: hard hat, safety glasses, reflector type vests, protective gloves and safety footwear.

**SCONQUID** 

## **TERMS & CONDITIONS**

## CONQUIP ENGINEERING GROUP STANDARD PRODUCT WARRANTY

### 01. COMMENCEMENT

- 1.1 This Warranty shall commence on the Commencement Date and shall continue until the earlier of:
- (a) the Expiry Date; or
- (b) the date on which it may be voided in accordance with clause 4.1(b) when it shall terminate automatically without notice.

### 02. DUTY OF GOOD FAITH

2.1 The Purchaser shall in the exercise of its rights under this Warranty and in the compliance with its obligations under this Warranty be subject to and shall in all respects owe and comply with a duty of good faith to the Warrantor.

### 03. NATURE AND EXTENT OF COVER

- 3.1 Subject to clause 3.2 the Warrantor agrees and undertakes to the Purchaser that it shall be liable to the Purchaser under and in accordance with the terms of this Warranty in the event that:
- (a) prior to the Expiry Date the Purchaser shall notify a Warranty Claim to the Warrantor; and
- (b) the Equipment or any relevant part of the Equipment shall have become unusable as the result of defective material or defective workmanship prior to the Expiry Date.
- 3.2 The Warrantor's obligation under clause 3.1 shall be expressly subject to the provisions of clauses 4, 5 and 6 and conditional upon the Purchaser's compliance in full with the provisions of clause 7.

### 04. RESTRICTIONS

- 4.1 The following restrictions apply to this Warranty:
- (a) This Warranty is personal to the Purchaser and neither the legal benefit nor legal burden of this warranty may be assigned or novated or otherwise transferred by the Purchaser to any other party. Any purported assignment, novation or transfer shall not be binding upon the Warrantor.
- (b) This Warranty shall be void in the event that the Purchaser:

- (i) cannot provide authentic and original documentary evidence that the Purchaser has during the period between the Commencement Date and the Expiry Date complied with the Maintenance and Servicing Requirements; and/or
- (ii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Usage Cycle Parameters; and/or
- (iii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Use Parameters; and/or
- (iv) has carried out, or procured the carrying out by any third party of, any repair to the Equipment or any part of the Equipment which is not an Authorised Repair; and/or
- (v) has operated the Equipment after having replaced any part of the Equipment with a part which has not been supplied and fitted by the Warrantor; and/or
- (vi) has modified the Equipment in any way prior to use.

### 05. EXCLUSIONS

- 5.1 The following are excluded from the scope of this Warranty:
- (a) Loss of and/ or damage to the Equipment or any part of it resulting from any collision between the Equipment and any other fixed or stationary or mobile object whatsoever, irrespective of whether that collision was or was not caused by the Purchaser; and/or
- (b) Loss of and/or damage to any personal property and/or possessions or other equipment not forming part of the Equipment but which is present in or about the Equipment; and/or
- (c) loss and/or damage which is covered by any other insurance policy taken out and maintained by the Purchaser or in respect of which the Purchaser has a contractual obligation to do so; and/or
- (d) loss and/or damage to the equipment which is consistent with the use by the Purchaser of the Equipment:
- (i) in compliance with the Maintenance and Servicing Requirements; and
- (ii) in compliance with the Usage Cycle Parameters; and
- (iii) in compliance with the Use Parameters; and
- (iv) having only carried out Authorised Repairs to the Equipment; and
- (v) having all and any replacement parts fitted by the Warrantor; and
- (vi) in unmodified form.



### 06. LIMITATION OF LIABILITY

- 6.1 The Warrantor's liability to the Purchaser shall be limited as follows:
- (a) The Warrantor shall not in any circumstances be liable to the Purchaser for indirect and/or consequential and/or economic loss suffered and/or incurred as the case may be by the Purchaser; and
- (b) The Warrantor shall only be liable to the Purchaser for the reasonable and proper costs reasonably and properly incurred by the Purchaser directly in connection with the repair and/ or replacement (at the Warrantor's absolute discretion) of the Equipment or any part of the Equipment; and
- (c) The Warrantor's liability to the Purchaser shall notwithstanding any other provision of this Warranty, not in any circumstances exceed the Purchase Price of the Equipment.

### 07. WARRANTY CLAIMS

- 7.1 The Purchaser shall in respect of any claim against the Warrantor under this Warranty and within 24 hours of the occurrence of the subject matter of the Warranty Claim:
- (a) Complete in full and submit to the Warrantor a Warranty Claim in the form annexed to Schedule 4;
- (b) Provide date stamped or date identifiable photographs evidencing the claim; and
- (c) Make the Equipment or the relevant part of the Equipment available to the Warrantor for inspection within 48 hours of notification of the relevant Warranty Claim.

### 08. ENTIRE AGREEMENT

- 8.1 This Warranty constitutes the entire agreement between the parties and supersedes and extinguishes all previous promises, assurances, warranties, representations and understandings between them, whether written or oral, relating to its subject matter.
- 8.2 Each party agrees that it shall have no remedies in respect of any statement, representation, assurance or warranty (whether made innocently or negligently) that is not set out in this Warranty. Each party agrees that it shall have no claim for innocent or negligent misrepresentation or negligent misstatement based on any statement in this Warranty.

No variation of this Warranty shall be effective unless it is in writing and signed by the parties (or their authorised representatives).

### 09. WAIVER

No failure or delay by a party to exercise any right or remedy provided under this Warranty or by law shall constitute a waiver of that or any other right or remedy, nor shall it prevent or restrict the further exercise of that or any other right or remedy. No single or partial exercise of such right or remedy shall prevent or restrict the further exercise of that or any other right or remedy.



### 10. SEVERANCE

- 10.1 If any provision or part-provision of this Warranty is or becomes invalid, illegal or unenforceable, it shall be deemed deleted, but that shall not affect the validity and enforceability of the rest of this Warranty.
- 10.2 If any provision or part-provision of this Warranty is deemed deleted under clause 10.1 the parties shall negotiate in good faith to agree a replacement provision that, to the greatest extent possible, achieves the intended commercial result of the original provision.

### 11. THIRD PARTY RIGHTS

11.1 This Warranty does not give rise to any rights under the Contracts (Rights of Third Parties) Act 1999 to enforce any term of this Warranty.

### 12. GOVERNING LAW

12.1 This Warranty and any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with it or its subject matter or formation shall be governed by and construed in accordance with the law of England and Wales.

### 13. JURISDICTION

13.1 Each party irrevocably agrees that the courts of England and Wales shall have exclusive jurisdiction to settle any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with this Warranty or its subject matter or formation.

# **EC DECLARATION OF CONFORMITY**

### IN ACCORDANCE WITH EN ISO 17050-1:2004

Declaration: As defined by the Machinery Directive 2006/42/EC and subsequent amendments

We, CONQUIP ENGINEERING GROUP, herewith declare that the following indicated equipment meets the fundamental health and safety requirements concerning the EU guideline(s), due to their design and manufacture.

This declaration will be rendered null and void if the machine is changed without our approval.

SIGNED:

**DATED: 2024** 

**\$CONQUIP** 

Garry Critchley, Chief Executive Officer

| PRODUCT<br>CODES | GENERAL DESCRIPTION / DESIGNATION | WORKING<br>LOAD LIMIT |
|------------------|-----------------------------------|-----------------------|
| CA233-05000      | 3-metre Lifting Beam              | 5000kg                |
| CA235-05000      | 5-metre Lifting Beam              | 5000kg                |
| CA237-05000      | 7-metre Lifting Beam              | 5000kg                |

| ITEM                        | CODE                 | DESCRIPTION   |
|-----------------------------|----------------------|---|
| EC DIRECTIVE/<br>REGULATION | 2006/42/EC           | Directive 2006/42/EC- new machinery directive   |
| HARMONISED                  | BS EN ISO 12100:2010 | Safety of machinery General principles for design<br>Risk assessment and risk reduction |
| STANDARDS                   | BS EN 13155-2020     | Crane Safety- Non-fixed load lifting attachments  |
| OTHER                       | LOLER 1998           | Lifting Operations and Lifting Equipment Regulations<br>1998 (LOLER)                    |
| REGULATIONS                 | PUWER 1998           | Provision and Use of Work Equipment Regulations<br>1998 (PUWER)                         |

## TALKING TO US IS EASY **WE'RE HERE TO HELP**

Call us on (02) 8844 4590 Email us at sales@conquipgroup.com.au www.cqegroup.com/au







