

User Guide

Pod Lifting Frame



Product Information

Specification

Item	Product Code
Pod Lifting Frame	CA144-03600

Product Information


Overview

The Conquip Pod Lifting Frame enables the transportation of prefabricated modular pods to the required structure level.

The Pod Lifting Frame fits flush against the building structure for easy transfer from the lifting frame into the building.

Key Benefits

- The frame incorporates integrated attachment points to secure the pod in the frame and to secure the frame to the building structure.
- The frame doors lock into place as an extra safety precaution.
- It comes complete with four single leg lifting chains to enable easy attachment to the crane chains without the use of a ladder.
- Manufactured in the UK from quality British and EU steel.

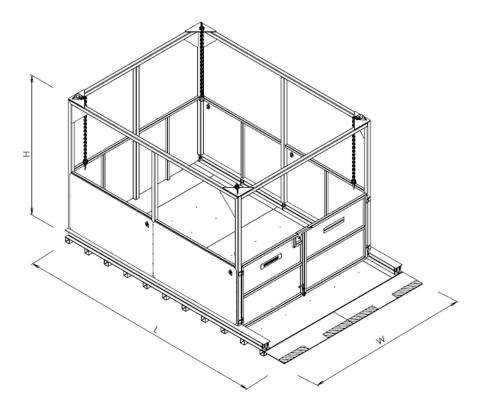


¹Working Load Limit

Height	Width	Length	Weight	WLL ¹
3075mm	3385mm	5362mm	2250kg	3600kg

Product Information

Parts Diagram

Pod Lifting Frame

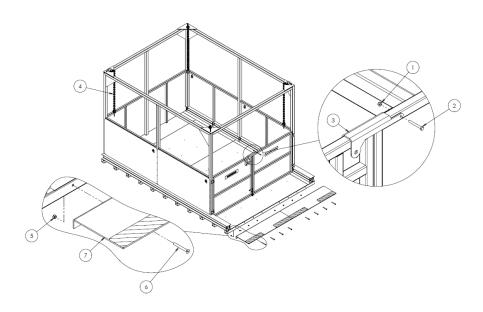

NOTE: These parts are for this model, they may differ for previous versions. Please contact Conquip with any queries.

Item Number	Part Number	Description	Quantity
1	NS800013	M10 Nyloc Nut	1
2	NS800917	M10 x 80 Hex Head Set Screw	1
3	ZZ190064	Gate Latch	1
4	CO15-10-4ZX8	Lifting Chain Assembly	4
5	NS800121	M16 Nyloc Nut	8
6	NS800885	M16 x 140 Socket Countersunk Screw	8
7	CA144-03600-01-16	Bolt on Lip Plate	2

Original Working Instructions

Usage Instructions


Important Usage Notes

- The Pod Lifting Frame must onlybe lifted by the designated four lifting points.
- The Pod Lifting Frame is for lifting and transporting pods only. Do not use to raise or transport personnel.

Usage Instructions

- 1. Ensure exclusion zones are in place prior to lifting.
- 2. Attach a suitable rated chain sling of at least 2 metres to the end of the four single lifting chains at each of the corners of the frame.
- 3. Load the frame with the pod.
- 4. Secure the load, using the integrated attachment points. (Fig 1)

Fig 1

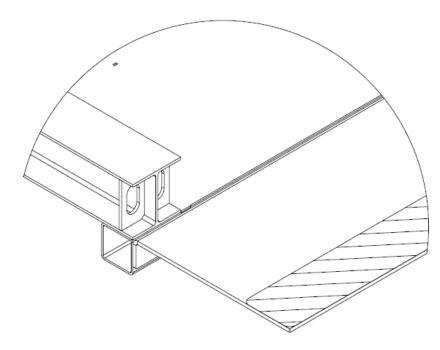

Original Working Instructions

Usage Instructions

Usage Instructions Continued

- 5. Ensure the doors are fully closed and bolted.
- 6. Check that personnel are clear from the immediate area and the future location to allow for swing of the frame when lifting off the ground. Ensure tag lines are attached.
- 7. Carefully raise the frame just off the ground and check for balance and security.
- Carefully crane lift the frame to the required structure level of the building, guide into place using tag lines and lower until the ramp is located on the floor of the structure and the frame is flush to the outside, edge of the structure.
- 9. Secure the frame to the building structure by fastening ratchet straps to the integrated attachment points (Fig 1) and a secure part of the building.
- 10. Unload the pod from the frame.
- 11. Once the pod has been unloaded, unsecure the frame from the building and lower onto a firm, stable, flat surface.
- 12. Once you have finished using the Pod Lifting Frame, detach it from the lifting equipment.

Original Working Instructions Safaty Instructions

Safety Instructions

Basic Safety

A site-specific Risk Assessment, and lift plan where applicable, must be completed by the responsible person before using this equipment to control risks, produce a safe system of work and ensure safety for you, your colleagues and others. Your risk assessment will determine the correct Personal Protective Equipment (PPE) for the task you are doing. You must use it. Conquip recommends that you should wear:

- Suitable clothing
- Gloves
- Hard hat
- Protective footwear (steel toecaps)
- Safety glasses











Important Safety Notes

- Read these instructions before using this equipment. If there is anything you do not understand
 or if you have any concerns do not use this equipment. Contact your supervisor or Conquip
 Engineering Group for advice.
- You must check that you have considered all the safety requirements for the task you are doing and that this equipment is suitable.
- You must protect bystanders and the general public by preventing access to the working area.
- Do not use this equipment if you are tired, unwell or under the influence of alcohol or drugs. If you are taking any medicine or undergoing treatment you should inform your supervisor.

Usage & Transportation

- Never unevenly load this equipment.
- The weight of the equipment, together with its attachments, must be added to the weight of the load when calculating the total load that will be imposed on the lifting apparatus / operating machine.
- This equipment must be used in conjunction with the load ratings of the lifting apparatus / operating machine. (Refer to the manufacturers' load ratings and original working instructions).
- Make sure you know how to use this equipment and understand all aspects of its operation in case of emergency.
- This equipment weighs more than 25kg. Do not lift or manhandle without machine assistance.
- Do not operate this equipment near overhead power lines.
- Take care in confined spaces, near ceilings or similar hazards. This equipment was designed for vertical lifting. Do not drag, or swing.
- Before operating this equipment, check that you have enough space for you to work safely and make sure that the working area is clear of hazards, obstructions and personnel.
- Before lowering equipment make sure that the landing zone is clear and capable of accepting the size and weight of the load.
- Crush Risk. Keep hands and feet clear of the equipment at all times to avoid injury.
- Do not exceed the maximum Working Load Limit (WLL) shown on the serial plate. Ensure that the WLL
 on the individual lift points is not exceeded.
- Before lifting, check that the load is secured, balanced and stable. Allow space for the equipment to
 move if the load shifts.

Personnel

- All personnel must wear relevant personal protective equipment.
- Do not wear loose clothing or jewellery and tie back long hair to avoid becoming tangled or trapped in this equipment. You must make everyone in the work area aware of what you are doing.
- All personnel involved in the lifting operation must be competent to do so and must have been briefed
 in conjunction with this User Guide available from Conquip Engineering Group, the manufacturer.

Equipment Maintenance & Cleaning

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure
 compliance with relevant regulation/s. (Conquip recommend to carry out thorough examination every
 six months).
- This product may incorporate various loose and detachable items of lifting gear. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be
 protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as
 determined by your risk assessment or working practice. If you have any concerns about condition or
 suitability do not use.

Disclaimer

Warranty

The products supplied by Conquip Engineering Group are all guaranteed by a 12 month warranty.

Apart from where exceptions apply, Conquip Engineering Group promises to repair or replace any fault which the Company considers to be due to defective material or workmanship within 12 months of the date of sale, at no additional cost.

- Faults arising from unauthorised alterations (see modifications section below for full details).
- Damage caused by abuse, neglect, misuse or falling.
- Damage caused because of failure to follow transportation, storage, loading, cleaning or operating instructions.
- Replacement or repair of components due to fair wear and tear.
- Any consequential damage or wear arising from the use or fitting of additional or non-standard parts.

Modifications

If any third-party modifications or alterations, involving drilling, welding, cutting or distortion of materials in any form, are to be carried out on the product, Conquip Engineering Group must provide full written approval prior to the work being carried out.

Alterations, modifications, additions or repairs must be carried out by Conquip Engineering Group's recognised distributors, if they are not carrying out the work themselves.

Conquip Engineering Group operate a continuous improvement policy and therefore reserve the right to alter technical specifications and user guide details at any point without notice.

Conquip Engineering Group will not cover or reimburse any transportation and/or shipment costs to and from their premises or their recognised agents, or any material and/or labour costs for repair, replacement or assessment against a warranty claim.

Conquip Engineering Group and/or their directors, employees, insurers or recognised agents will not be held liable for consequential damages, losses or expenses relating to the inability to use the product correctly for its purpose.

EC Declaration of Conformity

In accordance with EN ISO 17050-1:2004

Declaration: As defined by the Machinery Directive 2006/42/EC and subsequent amendments

We, CONQUIP ENGINEERING GROUP, herewith declare that the following indicated equipment meets the fundamental health and safety requirements concerning the EU guide line(s), due to their design and manufacture.

This declaration will be rendered null and void if the machine is changed without our approval.

Signed:

Dated: 2018

Garry Critchley, Managing Director

Product Code(s):	CA144-03600
EC Directive/ Regulation:	2006/42/EC, Lifting Operations and Lifting Equipment Regulations 1998 Provision and Use of Work Equipment Regulations 1998
Harmonised Standards:	BS EN ISO 12100:2010
General Description/ Designation:	Pod Lifting Frame- CA144-03600
WLL:	CA144-03600 = 3600kg

Important Notes

- This User Guide is for this Conquip product only.
- Any movements of the product must be thoroughly planned before the work commences to identify
 potential hazards and assess risk.
- All personnel involved in lifting and transportation of this product must have read this User Guide and must be properly briefed.
- You must be competent, alert and medically fit when using this equipment. If you have a medical
 condition, a mental or physical disability, you must seek advice from a medical professional before using
 this equipment.

Talking to us is easy

We're here to help

Call us on 0845 520 1101 Email us at sales@cqegroup.com www.cqegroup.com

Conquip Engineering Group

Waterbrook Estate, Alton, Hampshire, GU34 2UD

Copyright © 2018 Conquip Engineering Group. All Rights Reserved. Pod Lifting Frame User Guide - Issue 2